

PINNACLE SL600HD

HEAVY DUTY STAIR LIFT





THE INDUSTRY'S ONLY 600 LB CAPACITY STAIR LIFT

High-backed, contoured 25" wide seat ensures a comfortable and secure ride. Sturdy, stationary armrests and reinforced footrest add stability for safer transfers. Slides out from the wall as it pivots at the top landing.

As with all Pinnacle stair lifts, the HD model is engineered to the highest industry standards and designed for optimal comfort, convenience, and aesthetics.

The patented nylon polymer worm gear provides low friction for longer battery operation during a power outage and the elimination of maintenance related to track lubrication providing extra peace of mind.

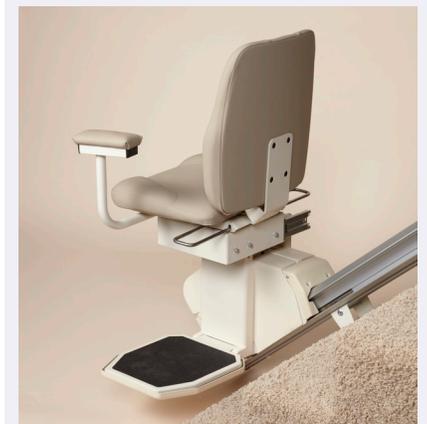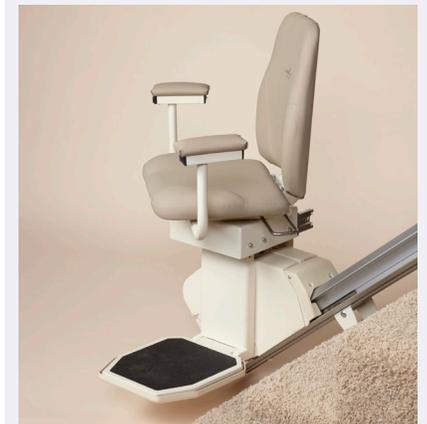

UNIQUE SLIDE-SWIVEL SEAT

High capacity seat pivots 85° as it slides away from the wall to allow for installation closer to the wall and easier dismount at the top and the bottom of the stairwell.

COMFORT AND PERFORMANCE



Safety sensors on chassis and footrest stop the lift instantly when an obstruction is present.



Nylon-polymer gear with helical worm drive features 6-points of contact for a smooth ride.



Oversized footrest provides comfort and security.



I can safely access the upper level of my home with my stair lift. It allows me to move comfortably in and out of my chair with its swivel seat and sturdy armrests.

SL600HD PRODUCT SPECIFICATIONS

WEIGHT CAPACITY	600 lb	INCLINE LIMITS	32° - 45°
TRACK LENGTH	15'6" - 40'	SPEED	14 FPM
SEAT SIZE	25"W x 16"D	BACKREST SIZE	24"W x 17"H
FOLDED WIDTH	17"	DRIVE	- Patented nylon polymer - Helical worm gear
CERTIFIED	- ETL certified to ASME18.1 - Commercially rated	WARRANTY	- 3-year parts - 10-year gear - 1-year battery
SAFETY FEATURE(S)	- Obstruction sensors - 85° seat swivel interlock - Seatbelt - Centrifugal overspeed brake	OPTION(S)	- Retractable seat belt - Key lock - Extra rail - Manual lowering tool